**SB Solutions, Inc.**
**P.O. Box 4506**
**Cary, NC 27519-4506 USA**
**Phone: 919-342-6514**
**Fax: 919-342-6056**
**www.i2ctools.com**

# Getting Started with USB-to-I2C Elite

**For 32-bit and 64-bit versions of Windows XP, Vista, Windows 7, and Windows 8**

## USB-to-I2C Elite Package Contents

- USB-to-I2C Elite Hardware
- USB-to-I2C Elite installation software on CD-ROM or downloaded zip file.
  The included files will be installed in the target HDD subdirectory:
  - USB-to-I2C Elite Registration Form
  - USB-to-I2C Elite – Getting Started (this document)
  - USB-to-I2C Elite Hardware User's Manual
  - USB-to-I2C Elite Software User's Manual
  - USB-to-I2C Elite DLL User's Manual
  - USBtoI2C32.dll
  - License agreement

## Getting Started

1. The software must be installed before the hardware is inserted into the PC. To start the software installation process under Windows XP, Vista, or Windows 7, just insert the CD. Auto run should start the installation wizard automatically.
   Please note: You must have Administrator Privileges for successful installation.
   If the installation screen does not start automatically, you can begin the installation process manually by double-clicking on the Setup.exe file on the CD-ROM.
2. Fill out the Registration Card (RegFile.txt) and email the file to sales@i2ctools.com. You will be required to submit the registration file before support is provided. Note that the data provided in the registration is only used for internal SB Solutions, Inc. purposes. No information is shared with third parties.
3. Review the "USB-to-I2C Elite Hardware User's Manual" before connecting the Hardware to your PC or $I^2C$ target system.
4. The Hardware contains static sensitive devices, so care should be used to avoid ESD damage when unpacking and handling.
5. Insert the USB-to-I2C Elite hardware into a USB port. The Link LED should illuminate on the USB-to-I2C Elite hardware. Windows should display the 'New Hardware Found' wizard. You will see the following on Windows XP, although it should be similar on other Operating Systems.

5a. When this dialog box is displayed, choose "No,

Found New Hardware Wizard
Welcome to the Found New Hardware Wizard
Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission).
Read our privacy policy
Can Windows connect to Windows Update to search for software?
Yes, this time only
Yes, now and every time I connect a device
No, not this time
Click Next to continue.
< Back
Next >
Cancel

not at this time when asked if you want Windows to connect to Windows Update.
Click the **Next>** button.

5b. Windows will ask 'What do you want the wizard to do?'
Select **Install from a list or specific location (Advanced)** and then click the **Next>** button.

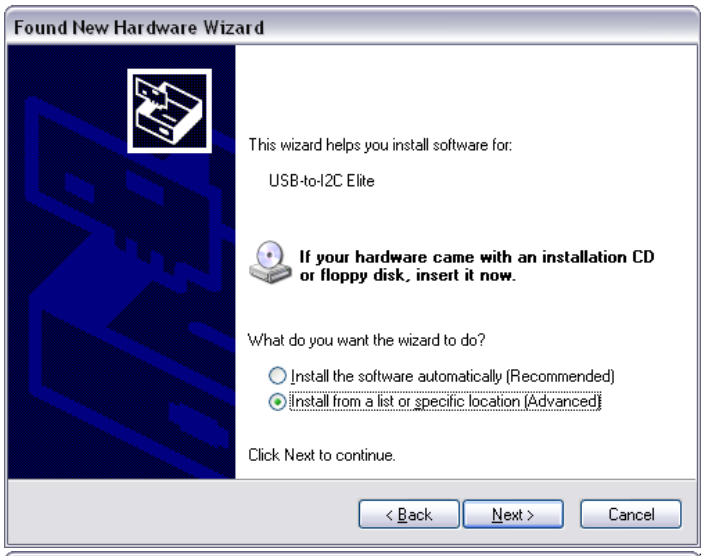
Found New Hardware Wizard
This wizard helps you install software for:
USB-to-I2C Elite
If your hardware came with an installation CD or floppy disk, insert it now.
What do you want the wizard to do?
Install the software automatically (Recommended)
Install from a list or specific location (Advanced)
Click Next to continue.
< Back
Next >
Cancel

5c. Windows will ask you to 'Please choose your search and installation options'
Check the **Include this location in the search** and then use the **Browse** button to navigate to the directory where you installed USB-to-I2C Elite or to the CD ROM if it is still in the drive. The default location for the drivers is shown. If you did not use the default installation directory, you will need to change the search directory. Click the **Next>** button.

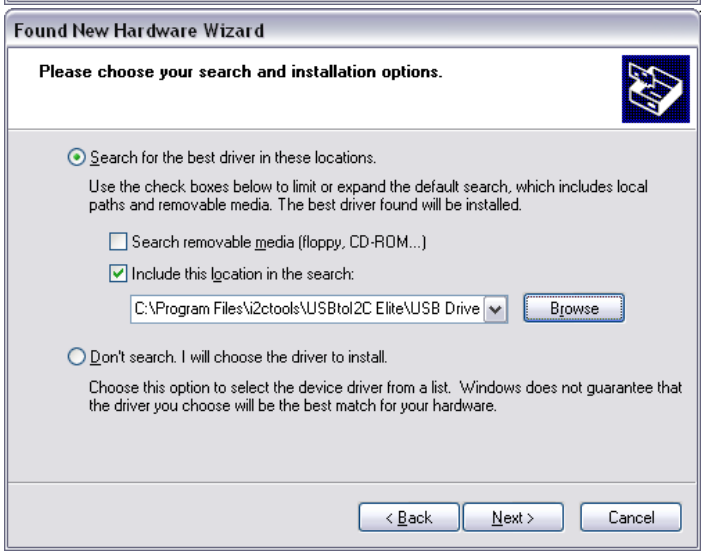
Found New Hardware Wizard
Please choose your search and installation options.
Search for the best driver in these locations.
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
Search removable media (floppy, CD-ROM...)
Include this location in the search:
C:\Program Files\i2ctools\USBtoI2C Elite\USB Drive
Browse
Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
< Back
Next >
Cancel

5e. Windows will display the 'Completing the Found New Hardware Wizard' dialog box. Click the **Finish** button.

6. You should now be ready to use USB-to-I2C Elite! The Link LED, located on the hardware, will be on.

## Disclaimer and Warranty

Proper application of the USB-to-I2C Elite kit is the sole responsibility of the user. SB Solutions, Inc. is not responsible for any damage resulting from misuse or improper installation. We will, at our option, repair or replace a defective USB-to-I2C Elite hardware within thirty (30) days of the purchase date. Return shipping is responsibility of the user.

Copyright © 2004-2013 SB Solutions, Inc.